


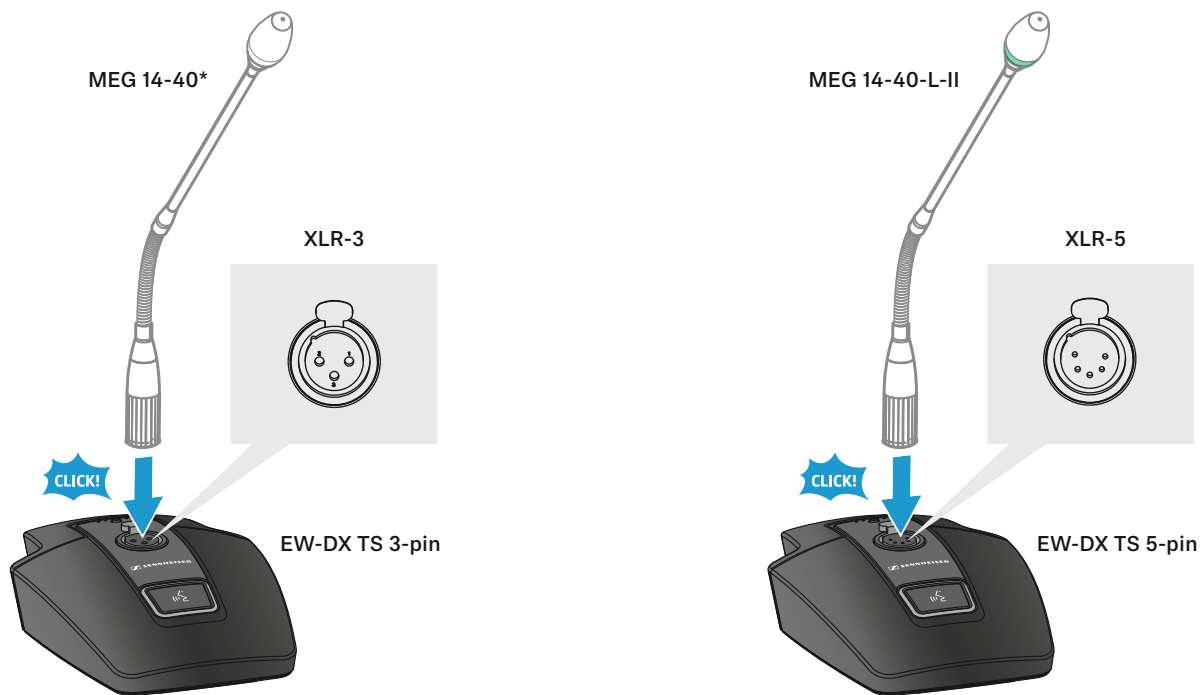

*see product specification sheet for more compatible XLR-3 gooseneck microphones



www.sennheiser.com/documentation

Smart Assist



Sennheiser electronic SE & Co. KG

Am Labor 1, 30900 Wedemark, Germany
www.sennheiser.com

Publ. 03/26, 587469/A03



Evolution Wireless Digital

EW-DX TS

Quick Guide
Kurzanleitung
Guide rapide
Guida rapida
Guía de inicio rápido
Guia rápido
Beknopte handleiding
Krótka instrukcja obsługi
Snabbguide

Kort vejledning
Pikaohje
Γρήγορος οδηγός
Kısa Kılavuz
Краткая инструкция
快速指南
クイックガイド
퀵 가이드

SENNHEISER

On/Off



OR



Off -> On



TS / EM 2
short on

On -> Off



TS / EM 2
long off

In the box



EW-DX TS 3-pin

OR




EW-DX TS 5-pin




BA 40


Battery/Charging

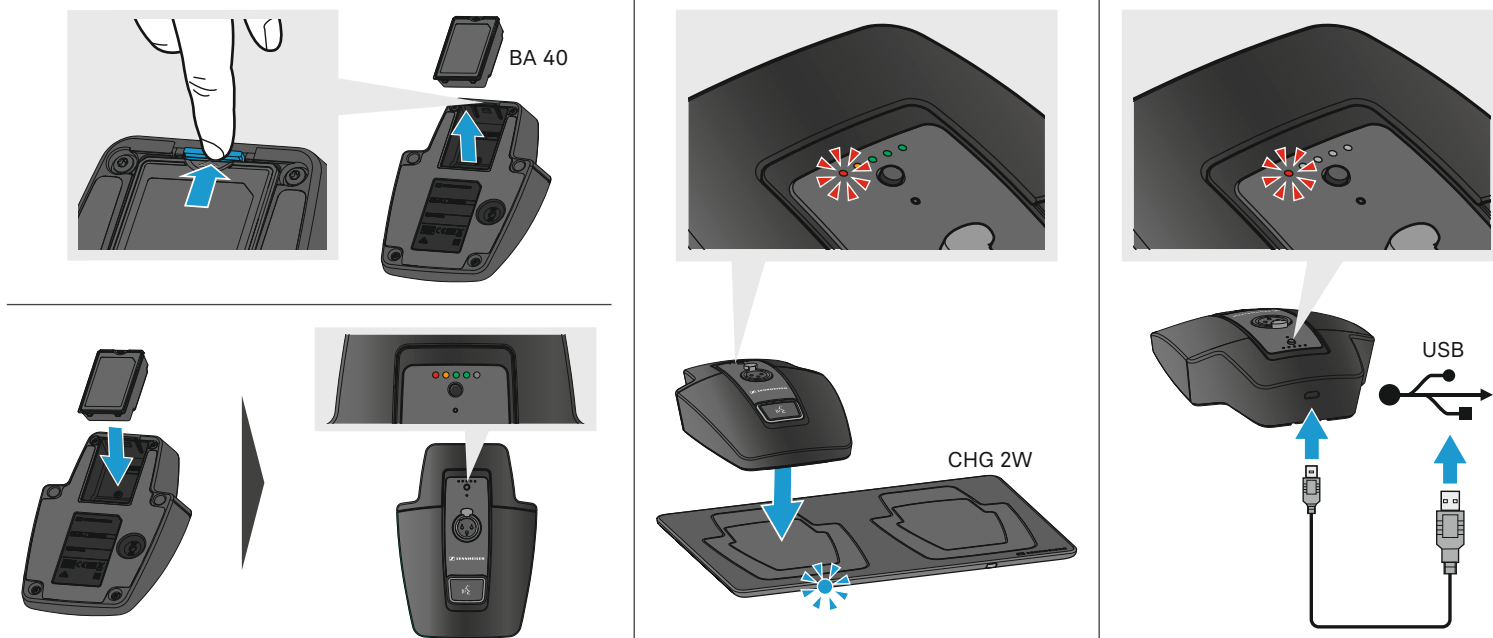

EW-DX TS 3/5-pin

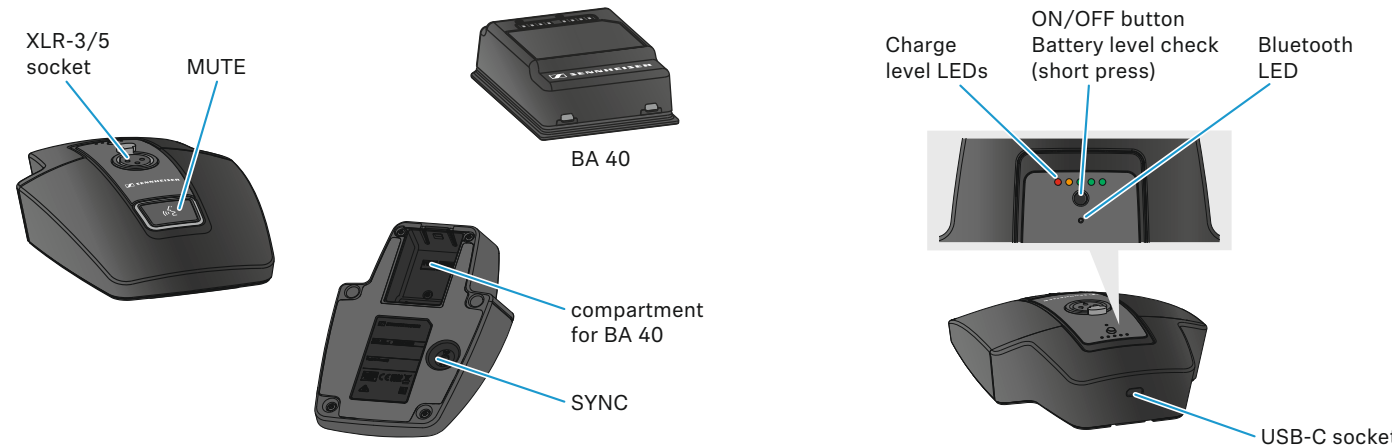

EW-DX EM 2

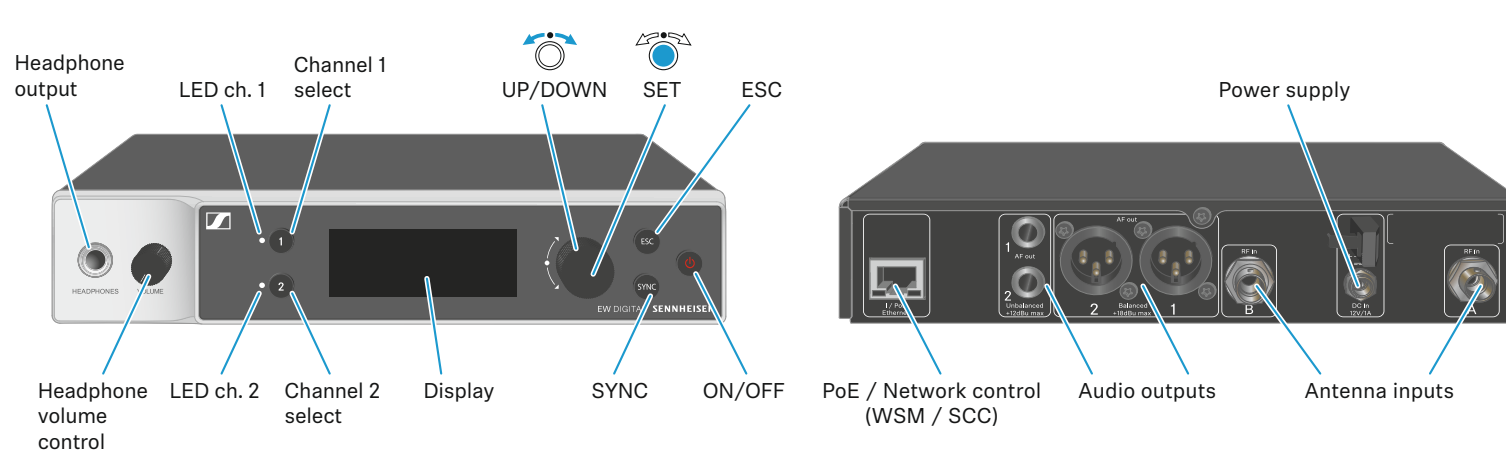

Operating time with BA 40 accupack

● ● ● ● ●	100 %	11:00 h
● ● ● ● ○	80 %	
● ● ● ○ ○	60 %	
● ● ○ ○ ○	40 %	
● ○ ○ ○ ○	20 %	
● ● ● ● ●	Low Batt	

XLR-3 11:00 h
XLR-5 10:00 h

Charging time (until fully charged)

		USB	Battery
XLR-3	On	7:00 h	5:00 h
XLR-3	Off	5:30 h	4:30 h
XLR-5	On	7:30 h	5:30 h
XLR-5	Off	5:30 h	4:30 h

Display

?

→

Instruction Manual

System Home Screen

1

2

Channel 1 Home Screen

Link name

Frequency

Gain -10 dB

AF Out +18 dB

Low Cut 80 Hz

Radio frequency level and link quality (Channel 1)

Transmitter audio level (Channel 1)

Mute mode (Channel 1)

Transmitter battery (Ch.1)

Audio settings

Frequency (Channel 1)

Link name (Channel 1)

Link name (Channel 2)

Frequency (Channel 2)

Transmitter battery (Ch.1)

Radio frequency level and link quality (Channel 1)

Mute mode (Channel 1)

Transmitter audio level (Channel 1)

System icons (see instruction manual)

Radio frequency level and link quality (Channel 2)

Transmitter audio level (Channel 2)

1

2

Channel 2 Home Screen

Frequency

Link name

Gain -10 dB

AF Out +18 dB

Low Cut 80 Hz

Audio settings


Transmitter battery

Radio frequency level and link quality

Transmitter audio level

LEDs

LED Ch.1/2	
	- Link ok - audio active
	- Link ok - audio muted or no capsule on SKM
	- Link ok - audio clip
	- No link
	- Link ok - Low transmitter battery
	- No link - Device switched off
	Bluetooth active to - sync with transmitter - connect with app
	Firmware update in progress

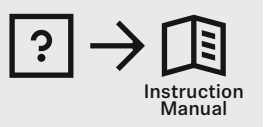

Sync

1

select channel & set parameters

2

short press

Ch 1

Press SYNC on mobile device

3

press

4

press

Ch 1

Sync successful

Mute

short press

MUTE

1

select Mute Mode

2

set value

Disabled

AF Mute

PTT

PTM

Ch 1

Cable Emul. Off

Mute Mode

Auto Lock off

Mute Mode

SK(M)

Table Stand

Up

OR

www.sennheiser.com/download

Instruction manual | Bedienungsanleitung | Notice d'emploi | Istruzioni per l'uso |
Instrucciones de manejo | Manual de instruções | Gebruiksaanwijzing |
Instrukcja obsługi | Bruksanvisning | Betjenings vejledning | Käyttöohje |
Οδηγίες λειτουργίας | Kullanım kılavuzu | Инструкция по эксплуатации | 使用说明书 |
取扱説明書 | 사용 설명서 |

Smart Assist

