

Display

Antenna switching diversity

Mute lock

Mute

Frequency

App connection

Key lock

Menu

Radio frequency level

Transmitter audio level

Gain

Audio output level

Channel

Transmitter battery

RF AF GAIN AF OUT CH BAT

470.200 MHz

24 dB 05 dB 01

GAIN AF OUT MUTE LOCK AUTO SCAN CHANNEL TUNE RESET

Instruction Manual

LEDs

LINK LED	
	- Link ok - audio active
	- Link ok - audio muted or no capsule on SKM
	- Link ok - audio clip
	- No link
	- Link ok - Low transmitter battery
	- No link - Device switched off

DATA LED	
	Bluetooth active to - sync with transmitter - connect with app
	Firmware update in progress

EM

SKM-S

SK

Instruction Manual

Sync

EM

SKM-S

SK

short press

OR

short press

short press

Instruction Manual

Menu

Gain

AF Out

Mute Lock

Auto Scan

Channel

Tune

Reset

RF AF GAIN AF OUT CH BAT

470.200 MHz

24 dB 05 dB 01

GAIN AF OUT MUTE LOCK AUTO SCAN CHANNEL TUNE RESET

473.200 MHz

AUTO SCAN

472.600 MHz

CHANNEL

473.200 MHz

TUNE

NO

RESET

YES

RESET

Instruction Manual

www.sennheiser.com/download

Instruction manual
Bedienungsanleitung
Notice d'emploi
Istruzioni per l'uso
Instrucciones de manejo
Manual de instruções
Gebruiksaanwijzing
Instrukcja obsługi
Bruksanvisning
Betjenings vejledning
Käyttöohje
Οδηγίες λειτουργίας
Kullanım kılavuzu
Инструкция по эксплуатации
使用说明书
取扱説明書
사용 설명서

Smart Assist

Available on the App Store

ANDROID APP ON Google play

Mute

Mute Lock → Instruction Manual

SK

SKM-S

Key lock

press both

unlocked

locked

Instruction Manual

Color coding sets

optional accessories for EM, SK and SKM-S

wireless link 1:

wireless link 2:

etc.

etc.

Instruction Manual

SKM-S

SKM-S

ME 2

ME 3

ME 4

25 cm (10")

2...3 cm (1")

Antennas

***optional accessories:**
ADP UHF (470 - 1075 MHz)
AD 1800 (1400 - 2400 MHz)

www.sennheiser.com/documentation

Smart Assist

Download on the **App Store** | GET IT ON **Google Play**

Sennheiser electronic SE & Co. KG
Am Labor 1, 30900 Wedemark, Germany
www.sennheiser.com

Publ. 05/26, 583962/A07

Evolution Wireless Digital
EW-D EM
EW-D SK
EW-D SKM-S

Quick Guide
Kurzanleitung
Guide rapide
Guida rapida
Guía de inicio rápido
Guia rápido
Beknopte handleiding
Krótka instrukcja obsługi
Snabbguide

Kort vejledning
Pikaohje
Γρήγορος οδηγός
Kisa Kilavuz
Краткая инструкция
快速指南
クイックガイド
퀵 가이드

SENNHEISER

Audio Out

XLR-3 | 6.3 mm

OR

Power supply

EU | US | UK | AU | KOR | CN

CLICK!

Smart Assist

The **Smart Assist** app simplifies your workflow

- Smart Assist app provides automated setup, operation and monitoring using any iOS or Android device
- Intelligent setup automatically creates reliable wireless connections, no wireless expertise required
- Mobile access to all system settings centralizes control and eliminates the need for complicated menu navigation on each device
- Easy frequency allocation and wireless channel naming help to keep systems organized

Download on the **App Store** | GET IT ON **Google Play**

In the box

Rack mount angles
Power supply adapters
Power supply

Battery

1 2 3

2 AA batteries (included) | *optional: BA 70 rechargeable battery

Battery

1 2 3 4

2 AA batteries (included) | *optional: BA 70 rechargeable battery

EW-D EM

LINK LED | DATA LED | UP | DOWN | SYNC | ON/OFF | SET | ESC

audio outputs | antenna inputs

On/Off

Off -> On

EM/SK/SKM-S
short on

On -> Off

EM/SK/SKM-S
long off

Identify/Battery check

On -> Identify/Check

SK/SKM-S
short Identify/Check

LINK LED SK/SKM-S		≤ 100 %
		≤ 60 %
		≤ 20 %

Display of synced EM

EW-D SKM-S

ON/OFF | LINK LED | DATA LED | SYNC | MUTE

EW-D SK

DATA LED | LINK LED | SYNC | MUTE | ON/OFF