 


Range 1G8 1785 – 1800 MHz



L-Band 1785 - 1795 MHz



H-Band 1795 - 1800 MHz

Channel	Bank 1	Bank 2	Bank 3	Bank 4	Bank 5	Bank 6	Bank 7	Bank 8	Bank 9	Bank 10	Bank 11	Bank 12	Bank 13	Bank 14	Bank 15	Bank 16	Bank 17	Bank 18	Bank 19	Bank 20	Bank U										
1	1795.650	1795.050	1785.500	1795.100	1795.100	1785.150	1799.850	1785.200	1799.800	1795.250	1785.150	1794.050	1795.350	1799.050	1785.500	1785.250	1785.450	1795.150	1799.900	1785.100	freely selectable										
2	1796.050	1795.450	1785.950	1795.500	1795.950	1785.550	1799.450	1785.600	1799.400	1795.850	1785.800	1793.150	1795.750	1798.600	1786.050	1785.650	1785.900	1795.550	1799.500	1785.500		freely selectable									
3	1796.750	1796.150	1786.850	1796.350	1797.250	1786.400	1798.600	1786.450	1798.550	1796.350	1786.250	1792.750	1796.900	1798.050	1786.500	1786.500	1786.900	1796.400	1798.150	1786.350			freely selectable								
4	1797.250	1797.100	1787.250	1796.850	1797.700	1786.900	1798.100	1786.950	1798.050	1797.300	1786.800	1791.900	1797.300	1797.600	1787.400	1787.000	1787.350	1796.900	1797.300	1786.850				freely selectable							
5	1797.650	1797.500	1788.100	1797.700	1798.650	1787.750	1797.250	1787.800	1797.200	1797.750	1787.250	1791.350	1798.150	1796.700	1787.850	1788.250	1788.250	1797.750	1796.900	1787.700					freely selectable						
6	1799.000	1798.350	1788.650	1798.100	1799.100	1795.850	1795.850	1788.200	1795.800	1798.650	1788.100	1790.500	1798.650	1796.250	1788.550	1789.650	1788.700	1798.150	1795.900	1788.100						freely selectable					
7	1799.400	1798.950	1789.500	1799.500	1785.100	1796.250	1795.450	1795.950	1795.400	1799.050	1788.600	1790.050	1799.500	1795.550	1788.950	1790.100	1789.400	1799.550	1795.500	1789.500							freely selectable				
8	1785.700	1799.350	1789.950	1795.950	1785.500	1797.200	1793.950	1796.700	1794.350	1799.900	1790.050	1789.450	1799.900	1795.150	1795.900	1790.700	1796.200	1796.000	1796.350	1790.550								freely selectable			
9	1786.100	1785.100	1790.550	1797.250	1786.350	1797.950	1793.550	1797.650	1793.500	1796.900	1790.500	1789.000	1796.350	1793.750	1796.750	1797.650	1796.750	1797.300	1797.750	1791.000									freely selectable		
10	1786.950	1785.500	1791.000	1798.650	1786.850	1798.400	1792.650	1798.500	1793.000	1798.150	1791.900	1788.100	1797.750	1793.250	1797.150	1798.100	1797.600	1798.700	1798.650	1791.900										freely selectable	
11	1787.450	1786.350	1791.900	1799.100	1788.100	1799.050	1792.200	1798.900	1792.150	1799.500	1792.750	1787.700	1799.050	1792.850	1798.050	1798.700	1799.350	1799.150	1799.050	1792.300											freely selectable
12	1788.300	1786.850	1793.150		1789.100	1799.450	1790.750	1799.450	1791.750		1793.150	1786.550		1791.100	1798.500	1799.100	1799.750			1793.150											
MHz	1785,7-1799,4	1785-1800	1785-1795	1795-1800	1785-1800					1795-1800	1785-1795	1795-1800	1785-1800					1795-1800	1785-1795												
	Subset	Full Set	Subset		Full Set					Subset			Full Set					Subset													
	1	1	L1	H1	2	3	4	5	6	H2	L2	L3	H3	7	8	9	10	H4	H5	L4											
	Austria, Czech Republic & others		Finland, Latvia & others	Belgium licence-free & others						Belgium licence-free & others	Finland, Latvia & others		Belgium licence-free & others					Belgium licence-free & others		Finland, Latvia & others											

Folgende Werkseinstellungen sind mit dem Menüpunkt „Reset“ jederzeit wieder abrufbar:

Auto Lock	„inactive“
Sensitivity	SK „-30 dB“
	SKM „-18 dB“
Cable Emulation (SK)	„Minimum“
Mute Mode (SK)	„AF On/Off“
Squelch	„Low“
AF Out (EM)	„+18 dB“
Equalizer (EM)	flat
Guitar Tuner (EM)	„inactive“
Name (SK, SKM, EM)	Name der Serie
Pilot Tone	werden mit Reset
User Bank “U”	nicht zurückgesetzt

The following factory-preset default settings can be recalled any time via the “Reset” menu item:

Auto Lock	„inactive“
Sensitivity	SK „-30 dB“
	SKM „-18 dB“
Cable Emulation (SK)	„Minimum“
Mute Mode (SK)	„AF On/Off“
Squelch	„Low“
AF Out (EM)	„+18 dB“
Equalizer (EM)	flat
Guitar Tuner (EM)	„inactive“
Name (SK, SKM, EM)	Name of Series
Pilot Tone	will not be reset
User Bank “U”	

DE

Für die Übertragung steht Ihnen folgender Frequenzbereich zur Verfügung:

Frequenzbereich	Bandbreite	Anzahl Frequenzen
1785–1800 MHz	15 MHz	1500

Die Sender und Empfänger verfügen über jeweils 20 Kanalbänke, auf denen werkseitig Frequenz-Presets voreingestellt sind. Innerhalb einer Kanalbänke sind die Frequenz-Presets untereinander intermodulationsfrei. Sie sind nicht veränderbar.

In der Kanalbänke „U“ können Sie in 10-kHz-Schritten Frequenzen frei einstellen und abspeichern. Diese sind unter Umständen nicht intermodulationsfrei.

Die Frequenz-Presets in den Kanalbänken „1“ bis „20“ sind in der Tabelle auf den Innenseiten dargestellt.

Folgende Werkseinstellungen sind mit dem Menüpunkt „Reset“ jederzeit wieder abrufbar (vgl. Innenseiten)

FR

Les émetteurs et les récepteurs sont disponibles dans une plage de fréquences:

Plage de fréquences	Largeur de bande	Nombre de fréquences
1785–1800 MHz	15 MHz	1500

Les émetteurs et les récepteurs possèdent 20 banques de fréquences, dans lesquelles chaque canal est pré-réglé en usine sur une fréquence. Les fréquences pré-réglées au sein d'une banque de fréquence sont compatibles entre elles, c.à.d. exemptes d'intermodulation. Elles ne peuvent pas être modifiées.

La banque de fréquences « U » permettent de mémoriser des fréquences au choix, qui peuvent être réglées par pas de 10 kHz. Il se peut que ces fréquences ne soient pas exemptes d'intermodulation.

Le tableau suivant dresse la liste des fréquences pré-réglées dans les banques de fréquences « 1 » à « 20 » :

Les paramètres par défaut suivants, pré-réglés en usine, peuvent être restaurés à tout moment via l'option **Reset**.

EN

Transmitters and receivers are available in the following frequency range:

Frequency range	Bandwidth	Number of Frequencies
1785–1800 MHz	15 MHz	1,500

Transmitters and receivers have 20 frequency banks respectively. Each of the channels in the frequency banks has been factory-preset to a frequency. These frequency presets within one frequency bank are intermodulation-free. They cannot be changed.

The frequency bank “U” allows the user to store individual frequencies which are freely selectable in 10-kHz steps. It might be that these frequencies are **not** intermodulation-free.

The table printed inside lists the frequency presets in the frequency banks “1” to “20”.

The factory-preset default settings can be recalled any time via the “Reset” menu item (s. inside)

ES

Para la transmisión se dispone de un rango de frecuencia:

Rango de frecuencia	Ancho de banda	Frecuencias
1785–1800 MHz	15 MHz	1500

Transmitters and receivers have 20 frequency banks respectively. Each of the channels in the frequency banks has been factory-preset to a frequency. These frequency presets within one frequency bank are intermodulation-free. They cannot be changed.

The frequency bank “U” allows the user to store individual frequencies which are freely selectable in 10-kHz steps. It might be that these frequencies are **not** intermodulation-free.

The table printed inside lists the frequency presets in the frequency banks “1” to “20”.

The factory-preset default settings can be recalled any time via the “Reset” menu item (s. inside)



SENNHEISER

1785–1800 MHz

Frequenzbereich / Frequency range **1G8**

Zusatzinformation für Sennheiser Serie ew 100 G3 1G8

Additional information for Sennheiser ew 100 G3 1G8 series

Informations complémentaires concernant les systèmes evolution wireless ew 100 G3 1G8

Información adicional para sistemas Sennheiser de la serie evolution wireless ew 100 G3 1G8

Sennheiser electronic GmbH & Co. KG

Am Labor 1, 30900 Wedemark, Germany, www.sennheiser.com
Printed in Germany, Publ. 08/17, 542656/A02